



ZLT S25

Wireless Router User Manual

Thank you for choosing the ZLT S25 4G Wireless Router. Please read this user manual completely, prior to use.

1: Key Parameters

- Working temps: 0°C -- +60°C
- Relative humidity: 5%--95%
- Power supply : Input AC: 100V~240V, 50Hz~60Hz
Output DC : 12V, 1A
- Size: 125x110x42(mm)
- Weight: 155g
- Rate of uplink and downlink: LTE(Cat 4): DL150Mbps; UL50Mbps

2: Installation

2.1 Open the rear shell of the router and insert usim into the slot. Please make sure you insert the sim card in the right direction

2.2 You may use a standard RJ45 cable if you wish to connect the router to a LAN/PC

2.3 Use the power adapter to connect the router to the power socket. Turn on the power switch. The router starts automatically after the boot, allowing for the initialization of the 1-2 minute.

Attention:

1. Do not insert the USIM card when connected to power supply.
2. Please gently insert the usim card, such as the insertion of a violent insert may damage the card.

3: About the Router



3.1 Ports & functions

1	POWER LED	2	WIFI LED
3	LTE LED	4	Signal Strength LED
5	USB	6	WIFI
7	WPS	8	NET
9	POWER KEY	10	DC POWER
11	Antenna	12	SIM
13	Battery	14	RJ11 VOICE PORT

3.2 Indicators

Type	Status	Description
Wi-Fi	Off	Wi-Fi off
	On	Wi-Fi on
	Blinking	WPS client is connecting
Signal Strength	Off	No signal, (the signal can be checked via the router configuration page).
	On	Signal reception, 4 or 5 bars better
POWER	Off	Router power off
	On	Power normal, router power on
LINE	On	Wired connection is normal, ready for data transmission
	Off	Error in wired connection, cannot perform data transmission
4G_LTE	Yellow light on	4G network is not connected or weak connection.
	Blue light on	4G network is connected, internet connection available

4: Quick Configuration Guide

The router supports standard RJ45 cables or WLAN wireless modes to connect to a LAN, Computer or any other supportive device. No drivers required; supports Windows XP, Windows 7, Windows 8, Windows 10, MAC OS, Linux, Android etc.

Step 1:


Set the computer IP address to match the router network segment, or use automatic access to get the IP address. After the computer IP address is set, enter the device's IP address on the IE browser: 192.168.0.1, Press 'Enter' on the device configuration

Status	
Platform Version	V3
SIM Status	Normal
Network Mode	LTE
IPv4 Status	Connected
WAN IP Address	10.148.136.17
IPv4 DNS	120.196.165.7,221.179.38.7
Internet Usage	
Total Traffic	-
Uplink Traffic	-
Downlink Traffic	-
Uplink Rate	-
Downlink Rate	-
Run Time	00:00:43
LTE Signal Status	
PLMN	China Mobile/46007
Service Status	Normal
PhysCellId	355
Cell Id	0704893-021
RSRQ(dB)	-8
RSRP(dBm)	-81
SINR	11
Roaming	No
BAND	38
MCS	1
CQI	11
Antenna Status	
Main Antenna	Built-in

Step 2:

Click the 'Login' icon to enter the configuration page

The login username and password are printed on the sticker at the bottom of the device.

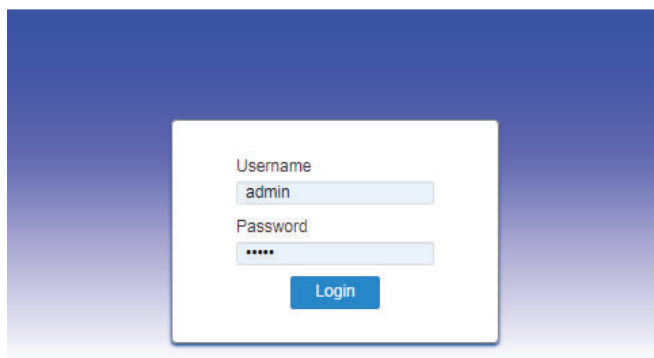

A login form is displayed on a blue gradient background. The form is a white rectangle with a blue border. It contains two input fields: 'Username' with the text 'admin' and 'Password' with masked characters '*****'. Below the password field is a blue 'Login' button.

Step3:

Go to 'Quick Settings'tab

(1) SSID configuration - the user can customize the SSID

Home	Quick Settings	Device Settings	SMS	Phonebook	Firewall	System Settings
------	----------------	-----------------	-----	-----------	----------	-----------------

Quick Settings

The wizard will show you how to set up basic parameters of gateway safely: Click "Previous" & "Next" to navigate, and click "Apply" to save settings. For advanced parameters, set them in other menu.

Previous Next

SSID

Network Name(SSID) *

SSID Broadcast ☒ Enabled ☐ Disabled

(2) Wi-Fi password settings – You can customize the Wi-Fi encryption mode, and set your own password to ensure the security of the account.

Home	Quick Settings	Device Settings	SMS	Phonebook	Firewall	System Settings
------	----------------	-----------------	-----	-----------	----------	-----------------

Quick Settings

The wizard will show you how to set up basic parameters of gateway safely: Click "Previous" & "Next" to navigate, and click "Apply" to save settings. For advanced parameters, set them in other menu.

Previous Next

Security Mode

Security Mode

Pass Phrase *

☐ Display Password

(3) Preview the contents of the configuration - review settings and click “Apply”.

HomeQuick SettingsDevice SettingsSMSPhonebookFirewallSystem Settings

<Quick Settings

The wizard will show you how to set up basic parameters of gateway safely:
Click "Previous" & "Next" to navigate, and click "Apply" to save settings. For
advanced parameters, set them in other menu.

PreviousApply

Configuration as Follows

Network Name(SSID)

cpe_OC7433

SSID Broadcast

Enabled

Security Mode

WPA2-PSK(AES)

5 : Device List

Item	UNIT	Quantity
CPE	unit	1
User manual	PCS	1
Power adapter	PCS	1
cable	PCS	1
External antennas	PCS	2